

info-center SNR-S2995G/S3850G S2990-16X

- info-center
 - info-center
 - Syslog-.
 - Syslog-
 - Syslog-
 - Syslog-
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
 -
- info-center 7.5.3.2(R0004.215)
 - Warning
 - Critical
 - info-center
 -
 -
 -
 -
 - Syslog-

info-center

info-center

```
info-center enable
```

Syslog-.

Syslog-

```
info-center loghost channel_id config server_ip facility facility
```

- channel_id - (1-8);
- server_ip - Syslog-;
- facility - Syslog-.

Syslog-

```
info-center loghost channel_id output-enable
```

Syslog-

```
info-center loghost channel_id match level level
```

- level - (alerts, critical, debugging, emergencies, errors, informational, notifications, warnings).

-

```
info-center loghost channel_id prefix value
```

- value - (off/on, on).

```
info-center loghost channel_id record-cmd
```

```
info-center logfile channel channel_id config count count_range disk file_name
```

- channel_id - ;
- count_range - - (1-40960);
- disk - (Flash, Nandflash, USB);
- file_name - .



, 4 warning Nandflash.

```
info-center logfile channel_id output-enable
```

```
info-center logfile channel_id match level level
```

- value - (off/on, on).

```
info-center logfile channel_id record-cmd
```

```
show info-center logbuffer
```

```
:  
show log
```

```
show info-center logfile channel_id
```

info-center

```
show info-center config
```

logbuffer

```
info-center clear logbuffer
```

Nandflash

```
delete nandflash:file_name
```

info-center 7.5.3.2(R0004.215)

```
info-center SNR (, SNR-S2990-16X) , .  
warning critical.
```

Warning

```
show info-center logsdram
```

Critical

```
show info-center lognvram
```

Flash .

```
info-center 10. () :
```

```
SNR-S2990-16X#show info-center  
card name master card  
sources  
debug log trap  
channels  
channel 0 name to_console  
channel 1 name to_monitor  
channel 2 name to_loghost  
channel 3 name to_trapbuffer  
channel 4 name to_logsram  
channel 5 name to_lognvram  
channel 6 name channel6  
channel 7 name channel7  
channel 8 name channel8  
channel 9 name channel9  
directions  
console monitor loghost trapbuffer logsram lognvram snmpagent logfile
```

- channel 0 - debugging ;
- channel 1 - debugging ;
- channel 2 - Syslog;
- channel 3 - debugging trap ;
- channel 4 - warning (logsram);
- channel 5 - critical (lognvram).

6 9 .

info-center

```
info-center enable
```

```
info-center source debug level level_id prefix on channel channel_id
```

- level_id - (0 - emergencies, 1 - alerts, 2 - critical, 3 - errors, 4 - warnings, 5 - notifications, 6 - informational, 7 - debugging);
- channel_id - .

```
info-center logfile channel 9 size size flash filename
```

- filename - ;
- size - .

```
show info-center logfile channel channel_id
```

- channel_id- .

Syslog-

```
info-center loghost server_ip facility facility channel channel_id
```

- server_ip - Syslog-;
- facility - Syslog-;
- channel_id - .