

SNR-S5210G. CLI (Command Line Interface).

- 
- CLI
- IP-
- VLAN, L3- VLAN
- 
- Uplink-
- , ,
- 

:

- Serial- Console , ;
- (Putty, Minicom, HyperTerminal) :
  - Serial- ;
  - 115200 ( S51xx 9600);
  - :8 , 1 , ;
  -
- 



WEB-

## CLI

- , ;
- , '>' . . . , 'enable';
- , '#';
- , 'config'. - '(config)#';
- , 'exit';
- , 'write' 'copy running-config startup-config' ;
- TAB, ;
- " " .



## IP-

VLAN 1, . IP- :

```
switch#conf
switch(config)#int vlan1
switch(config-if-vlan1)#ip add 192.168.1.100/24
```

## VLAN, L3- VLAN

```
switch(config)#vlan 2
switch(config)#interface ge2
switch(config-if)#switchport acc vl 2
switch(config-if)#exit
switch(config)#int vlan2
switch(config-if)#ip add 192.168.2.100/24
```

```
switch(config)#int ge2
switch(config-if)#bandwidth control 100000 both
```

### **Uplink-**

, 9, VLAN 2:

```
switch(config-if)#switchport mode trunk
switch(config-if)#switchport trunk allowed vlan 2
```

, ,

'admin', . 'nag', 'admin' :

```
(config)#username nag role network-admin password nag
(config)#no username admin
(config)#username nag password nagnag
```

Telnet. SSH Telnet, .. :

```
(config)#feature ssh
(config)#no feature telnet
```