

02 - Dial Plan

 Dial Plan - (, dialplan) — . Dial Plan .

:

Dial Plan *Line - Dial Plan - Basic Settings*

VP-52CG

SIP

Dial Plan

Basic Settings

RTCP-XR

› System

› Network

› Line

› Phone settings

› Phonebook

› Call logs

› Function Key

Basic Settings

☒ Press # to invoke dialing ?

☐ Dial Fixed Length11to Send ?

☒ Send after5Second(3~30) ?

☒ Press # to Do Blind Transfer ?


☐ Blind Transfer on Onhook ?

☒ Attended Transfer on Onhook ?

☐ Attended Transfer on Conference Onhook ?

☐ Press DSS Key to Do Blind Transfer ?

Apply

 .
Apply.

- **Press # to invoke dialing** - “#”
- **Dial Fixed Length to Send** - . . . , “11”, 11 .
- **Send after Second** - (: 330) . , “5” 5 , ,

- **Press # to Do Blind Transfer - .**

.
"##"

- **Blind Transfer on Onhook - .**

, , .

- **Attended Transfer on Onhook - .**

, , , .

- **Attended Transfer on Conference Onhook - , , .**

B C, () () . , , B C ,

- **Press DSS Key To Do Blind Transfer - DSS.**

DSS,