

13. ARP Safeguarding (ARP Anti-Flood)

ARP Anti-Flood

Global Configuration

ARP Anti-Flood

DISABLE

Action

drop-arp

Rate Limit

16

(1~100)pps

Recover Time

10

(0~1440)m

Apply

Del

Port Rate Limit Configuration

Port	Rate Limit(1~100)pps	Port	Rate Limit(1~100)pps
GE0/0/1	0	GE0/0/2	0
GE0/0/3	0	GE0/0/4	0
GE0/0/5	0	GE0/0/6	0
GE0/0/7	0	GE0/0/8	0
GE0/1/1	0	GE0/1/2	0

Apply

ARP Anti-Flood Entry

Src MAC	Src IP	Port	VLAN	Recover Time(m)	Recover MAC
---------	--------	------	------	-----------------	-------------

Refresh

Apply

ARP Anti-Flood, ARP-, CPU .

'Advanced Application - ARP Safeguarding'.

'Port Rate Limit Configuration' - ARP- (CPU). - ARP- (drop-arp) (drop-all).

'ARP Anti-Flood Entry'. (Recover Time) .