# SNR

•	•	boot.rom boot.rom boot.rom	nos.img nos.img nos.img	TFTP- FTP- USB-flash
• • •	• TFTP/F1 nandflas Boot-	NOS HTT ſP- h	P	
•	boot- boot-			

. Boot- NOS, . TFTP-. , portable-.

Normal State And									
Current Directory E:\	•	Browse							
Server interfaces 127	7.0.0.1 Software Loopback Interface 1				Show <u>D</u> ir				
Tftp Server Tftp Client DHCP server Syslog server Log viewer									
peer	file	start time	progress	bytes	total	timeo			
127.0.0.1:56112	.S2985G\nos.img<	09:37:40	100%	13609688	13609688	0			
About		<u>S</u> ettin	igs		<u> </u>	elp			

# (i) !

readme.txt, , "" boot.rom, .

# boot.rom nos.img TFTP-

Boot-:

SNR-S2985G-8T-POE#copy tftp://192.168.1.3/S2985G/boot.rom boot.rom

## NOS:

SNR-S2985G-8T-POE#copy tftp://192.168.1.3/S2985G/nos.img nos.img

SNR-S2985G-8T-POE#show version

## boot.rom nos.img FTP-

## Boot-:

SNR-S2985G-8T-POE#copy ftp://nag:nag192.168.1.3/S2985G/boot.rom boot.rom

#### NOS:

SNR-S2985G-8T-POE#copy ftp://nag:nag@192.168.1.3/S2985G/nos.img nos.img

# boot.rom nos.img USB-flash

SNR-S2995G-24FX#dir usb:

#### Boot-:

SNR-S2995G-24FX#copy usb:/S2995G/boot.rom boot.rom

## NOS:

SNR-S2995G-24FX#copy usb:/S2995G/nos.img nos.img

```
, :
```

SNR-S2995G-24FX#copy tftp://10.10.10.10/nos.img member-10#nos.img SNR-S2995G-24FX#copy tftp://10.10.10.10/nos.img member-11#nos.img

## NOS HTTP

NOS - TFTP/FTP-. Boot- .

- Switch basic configuration -> Firmware update -> HTTP service
- Switch basic configuration -> Switch basic configuration -> Save current running-configuration

NAG .							
SNR-S2985G-8T-POE	HTTP service						
Switch basic configuration	File	Обзор	S2985.img				
<ul> <li>         ■ ■ Switch basic configuration         ■ ■ SNMP configuration         </li> </ul>	Local file name	nos.img					
Image: Barbar SSH management Image: Image: Barbar Strategy Strat	File type	Img file 🗸 🗸					
TFTP service				Apply			
🗉 🧰 FTP service							
HTTP service							
🗉 🗀 Telnet server configuration							
🗄 🚞 Maintenance and debuggin	Information feedback window						
🗄 🚞 Module management							
Port configuration	File name is nos.img, file size is 12874335(bytes).						
🗉 🧰 MAC address table configurati	Denin to unite local file places unit						
VLAN configuration	Begin to write local life, please Walt						
IGMP Snooping configuration	Write ok.						
· _							

## **TFTP/FTP-**

#### SNR , TFTP FTP-.

#### TFTP-:

SNR-S2995G-24FX(config)#tftp-server enable

## FTP-:

SNR-S2995G-24FX(config)#ftp-server enable

#### FTP:

SNR-S2995G-24FX(config)#ip ftp username nag password nag

## nandflash

SNR nandflash,

#### nandflash:

SNR-S2995G-24FX#dir nandflash:

## nandflash:

```
SNR-S2995G-24FX#copy tftp://192.168.1.3/S2995G/SNR-S2995G-12(24_48)FX(TX)_7.5.3.2(R0004.0241)_nos.img nandflash: SNR-S2995G-12(24_48)FX(TX)_7.5.3.2(R0004.0241)_nos.img
```

#### nandflash:

```
SNR-S2995G-24FX#delete nandflash:nos0154.img
```

## Boot-

(format flash:), Boot-.

MGMT-, . , 1-.

(j) !

S2989G-24TX USB-flash. S2989G-48TX, S2995G, S3850G Boot- MGMT-.

Boot- Ctrl+b .

:

```
[Boot]: showconfig
Host IP Address: 10.1.1.1
Server IP Address: 10.1.1.2
```

:

```
[Boot]: setconfig
Host IP Address: [10.1.1.1] 192.168.1.1
Server IP Address: [10.1.1.2] 192.168.1.3
```

[Boot]: ping 192.168.1.3

#### TFTP-:

[Boot]: run tftp:S2985G/nos.img

#### , 'copy':

copy tftp://192.168.1.3/S2985G/nos.img nos.img

(j) !

Boot- nos.img 'write' !

#### Boot- boot.rom. .

#### boot.rom:

[Boot]: load S2985G/boot.rom

:

[Boot]: write boot.rom

(j) !

readme boot.rom, !

# SNR nos.img , , .

SNR-S2985G-8T-POE#boot img nos.img primary flash:/nos.img will be used as the primary img file at the next time!

SNR-S2985G-8T-POE#boot img 221.img backup flash:/221.img will be used as the backup img file at the next time!

#### :

SNR-S2985G-8T-POE#show boot-files
Booted files on switch
The primary img file at the next boot time: flash:/nos.img
The backup img file at the next boot time: flash:/221.img
Current booted img file: flash:/nos.img
The startup-config file at the next boot time: NULL
Current booted startup-config file: NULL

## (, ). :

Switch(licence)>

support.nag.ru 'show version'. . 'license', . .

```
License is valid,now system will start!
Switch>
Registration is successful.
Switch>
```

# boot-

- , .

[Boot]: boot startup-config null [Boot]: run

• ! TFTP- ( !).

# boot-

[Boot]: setbootpassword

! **()** 

boot- , !