

RADIUS SNR


- RADIUS
- RADIUS
- Vendor-Specific Attribute

RADIUS

RADIUS - , , .

RADIUS ,

SNR.

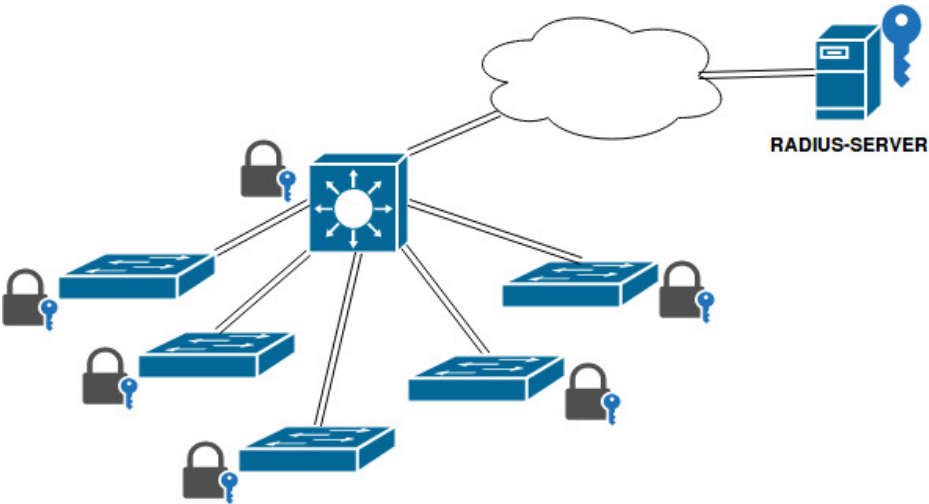

RADIUS

, SNR:

RADIUS- AAA :

```
radius-server authentication host {ip_addr} [key {key}]
aaa enable
```

loopback, :

```
radius nas-ipv4 {ip_addr}
```

RADIUS-, (console), (vty), WEB:

```
authentication line console login radius local
authentication line vty login radius local
authentication line web login radius local
```

 !

local radius, RADIUS- !

, , RADIUS-, , . RADIUS- - ().

, , .



!

S2962, S2965, S2982G, S2985G, S2995G S3850G vendor-specific,, , .

enable, :

```
authorization line vty exec radius local
```

RADIUS- , access-accept service-type 6.

enable RADIUS- . :

```
authentication enable radius local
```

RADIUS- \$enab15\$.

Vendor-Specific Attribute

, S2962, S2965, S2982G, S2985G, S2989G, S2995G S3850G (level 1-15) vendor-specific .
RADIUS- freeradius:

freeradius () /usr/share/freeradius/dictionary.snr :

```
VENDOR          SNR          40418
BEGIN-VENDOR    SNR
ATTRIBUTE       SNR-User-Priv 240    integer
END-VENDOR      SNR
```

/usr/share/freeradius/dictionary :

```
$INCLUDE /usr/share/freeradius/dictionary.snr
```

/etc/freeradius/users (1-15):

```
user Cleartext-Password := "password"
SNR-User-Priv = 1
```

'user' - 1.



!

S2962, S2965, S2982G, S2985G 7.0.3.5(R0241.0290), S2995G S3850G - 7.5.3.2(R0004.0152).